

COX

SERIES 32

4 WHEEL POCKET DOOR HARDWARE

INSTALLATION INSTRUCTIONS

1" TO 1 3/4" (25-44 MM) DOORS
AXLE BEARING - UP TO 150 LBS.

1. INSTALL HANGERS



Place hangers in track by fitting through hanger mounting space between track and jamb.


2. INSTALL HANGER BRACKETS



Screw all hanger brackets on door, 2 3/4" from edge of door to center of bracket.

3. INSTALL AND ADJUST DOORS

Attach bracket to hanger by lifting door and inserting adjusting bolt into slot until bolt head becomes seated. Align doors by turning adjusting bolt with wrench.

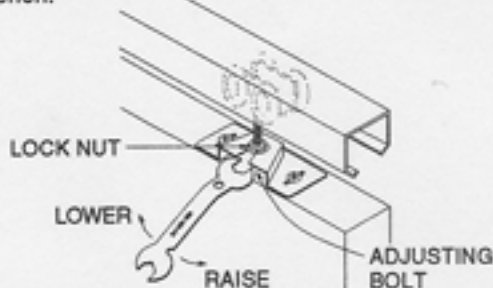


After final adjustment, tighten lock nut down to bracket as shown.

4. INSTALL FLOOR GUIDES



Nail nylon guide No. 04-002 to split jamb as shown, centering door in pocket. NOTE: For 1 3/4" doors, cut out center section of nylon floor guide.

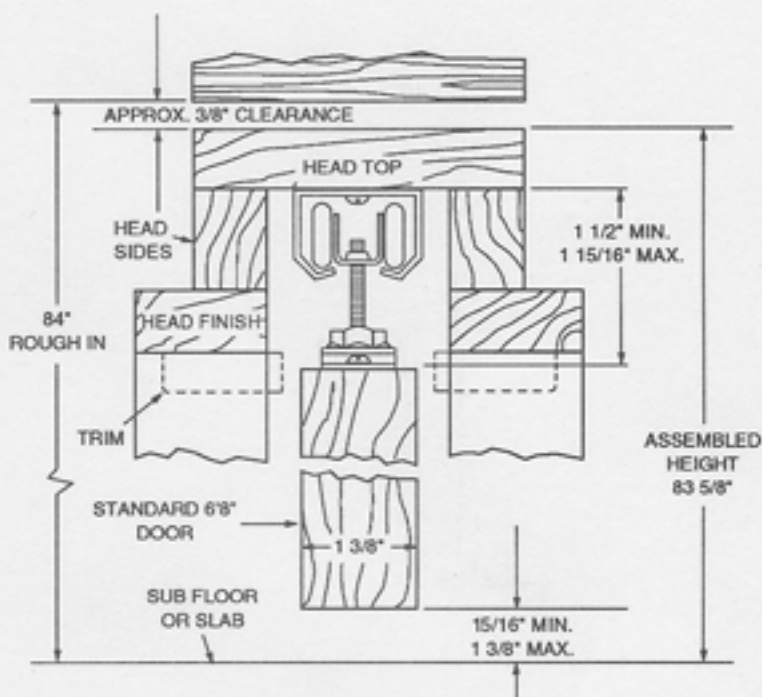

NOTE: Floor clearance is for a standard 80" door. Trim door accordingly for clearance over heavy carpet, etc.

Finish Door Size		2' - 0"	2' - 4"	2' - 6"	2' - 8"	3' - 0"
Rough Opening	Height	7' - 0"	7' - 0"	7' - 0"	7' - 0"	7' - 0"
	Width	4' - 2"	4' - 10"	5' - 2"	5' - 6"	6' - 2"
Frame Size	Height	6' - 11-5/8"	6' - 11-5/8"	6' - 11-5/8"	6' - 11-5/8"	6' - 11-5/8"
	Width	4' - 1-5/8"	4' - 9-5/8"	5' - 1-5/8"	5' - 5-5/8"	6' - 1-5/8"



COX HARDWARE MAKES GOOD DOORS BETTER!
ARTHUR COX & SONS, INCORPORATED
18311 East Railroad Street • Industry, CA 91748
(626) 965-1565 • FAX (626) 965-7507
Export: Overseas Operations, Incorporated
P.O. Box 7000-222 • Redondo Beach, CA 90277-5779
TEL: (310) 540-4600 • FAX (310) 540-8382

© 1994 by Arthur Cox & Sons, Incorporated